


# Your WOW! Remote

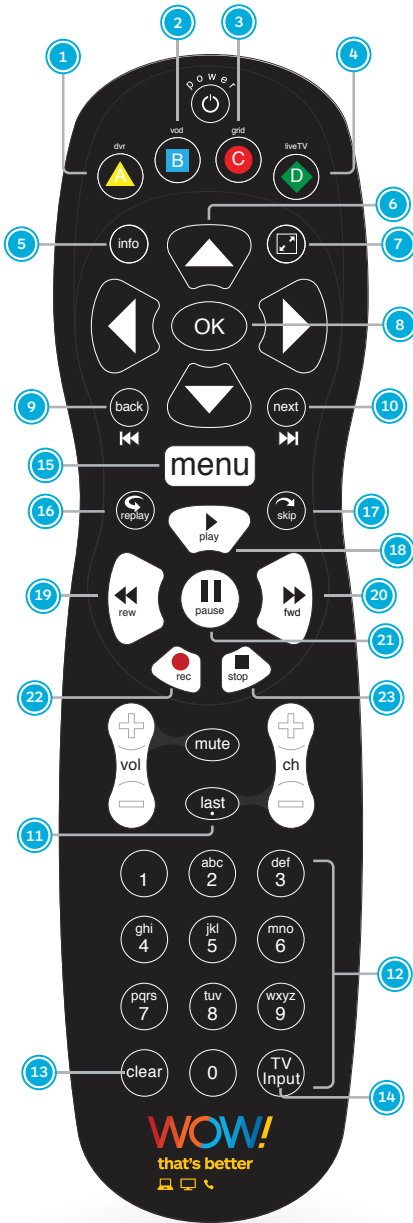

## Shortcut Buttons

- 1. DVR**  
Brings you to the Recorded TV category.
- 2. VOD**  
Brings you to the WOW! OnDemand category.
- 3. GRID**  
Alternates between the Grid Guide view of programming and the Smart Menu setup.
- 4. LIVE TV**  
Brings you to full-screen, live TV.

## Navigation

- 5. INFO**  
Brings up an action menu of options related to the item in focus.
- 6. ARROWS**  
Navigates the Smart Menu. Holding an arrow down activates turbo scroll, increasing your browsing speed.
- 7. SCREEN SIZE**  
Alternate between full-screen and the Smart Menu.
- 8. OK**  
Press **OK** to select a menu item or confirm an action.
- 9. BACK**  
Takes a list displaying TV programming back to the previous half hour. Also pages back through an info note.
- 10. NEXT**  
Takes a list displaying TV programming forward to the next half hour. Also pages forward through an info note.
- 11. LAST**  
Return to the last channel viewed.
- 12. NUMBER KEYS**  
Entering numbers will take you directly to the corresponding channel.
- 13. CLEAR**  
Deletes a character during text/number entries. Also removes the Flip Bar.
- 14. TV INPUT**  
Enables easy switching between TV input options.\*

*\*Not available on all TV models.*

## Player Controls

Control your recorded or live program with the following buttons:

- 15. MENU**  
From wherever you are, **MENU** returns you one step at a time back to the Category Cards. Press **MENU** twice to go directly to TV Channels category.
- 16. REPLAY**  
Rewinds the program seven seconds, so you can check out what you missed. Also moves the time slot a day back.
- 17. SKIP**  
Skips forward in your program the number of seconds that you predefine in settings. Also moves the time slot a day ahead.
- 18. PLAY**  
Begins playing the selected program.
- 19. REWIND**  
Press up to three times (for three speeds) to rewind the show.
- 20. FAST-FORWARD**  
Press up to three times (for three speeds) to fast-forward.
- 21. PAUSE**  
Pauses the show you are watching.
- 22. RECORD**  
Press while watching a show or when a show is in focus to record.
- 23. STOP**  
Exits out of a recorded show or stops a recording in progress if you're watching that show full-screen.

# Your WOW! Remote



## Shortcut Buttons

- DVR**  
Brings you to the Recorded TV category.
- VOD**  
Brings you to the WOW! OnDemand library.
- GRID**  
Alternates between the Grid Guide view of programming and the Smart Menu setup.
- LIVE TV**  
Brings you to full-screen, live TV.

## Navigation

- TV INPUT**  
Enables easy switching between TV input options.\*
- EXIT**  
Takes you back to where you were previously in the menu.
- NETFLIX**  
Netflix button for quick easy access to your account.
- INFO**  
Brings up an action menu of options related to the item in focus.
- ARROWS**  
Navigates the Smart Menu. Holding an arrow down activates turbo scroll, increasing your browsing speed.
- OK**  
Press **OK** to select a menu item or confirm an action.

\*Not available on all TV models.

**11. BACK**

Takes a list displaying TV programming back to the previous half hour. Also pages back through an info note.

**12. SEARCH**

Search for programs by title, keyword or category.

**13. NEXT**

Takes a list displaying TV programming forward to the next half hour. Also pages forward through an info note.

**14. LAST**

Return to the last channel viewed.

**15. NUMBER KEYS**

Entering numbers will take you directly to the corresponding channel.

**16. CLEAR**

Deletes a character during text/number entries. Also removes the Flip Bar.

**Player Controls**

Control your recorded or live program with the following buttons:

**17. GUIDE**

Brings up the viewing guide.

**18. MENU**

From wherever you are, the **WOW! button** returns you one step at a time back to the Category Cards. Press the **WOW! button** twice to go directly to TV Channels category.

**19. REPLAY**

Rewinds the program seven seconds, so you can check out what you missed. Also moves the time slot a day back.

**20. SKIP**

Skips forward in your program the number of seconds that you predefine in settings. Also moves the time slot a day ahead.

**21. PLAY**

Begins playing the selected program.

**22. REWIND**

Press up to three times (for three speeds) to rewind the show.

**23. FAST-FORWARD**

Press up to three times (for three speeds) to fast-forward.

**24. PAUSE**

Pauses the show you are watching.

**25. RECORD**

Press while watching a show or when a show is in focus to record.

**26. STOP**

Exits out of a recorded show or stops a recording in progress if you're watching that show full-screen.

**27. MUTE**

Instantly silences the program. Press **MUTE** again to resume sound.